


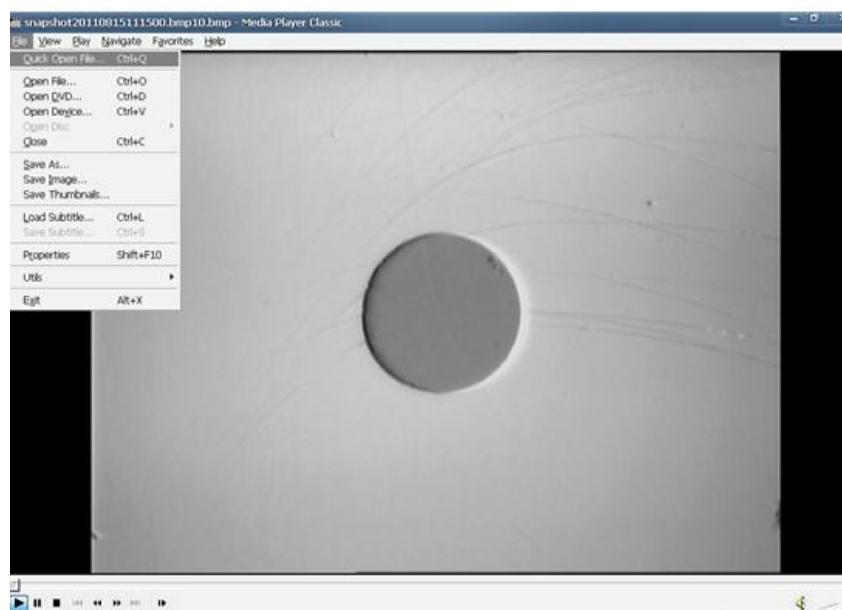


MAY91 Fiber Microscope Probe - Free Software Manual on PC




Click “mplayerc” at the icon of , you will see the following operation interface:

1. If you need to open files in your PC, click “File”, then “Quick Open File (Ctrl+Q)” and choose the file you would like to play.




2. When you use MAY91 Fiber Microscope Probe, connect it with PC by USB, click “File” and then “Open Device (Ctrl+V)”.

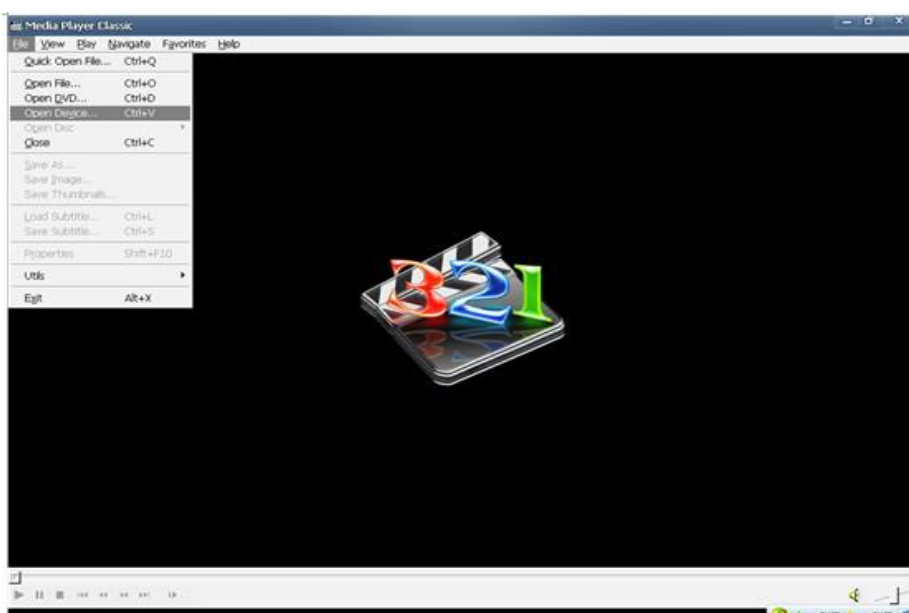





3. For “Video”, choose “Anritsu G0306B VIP”; For “Audio”, choose “Video Capture Device”; For “Country”, choose the country you are in. Then click “OK”.

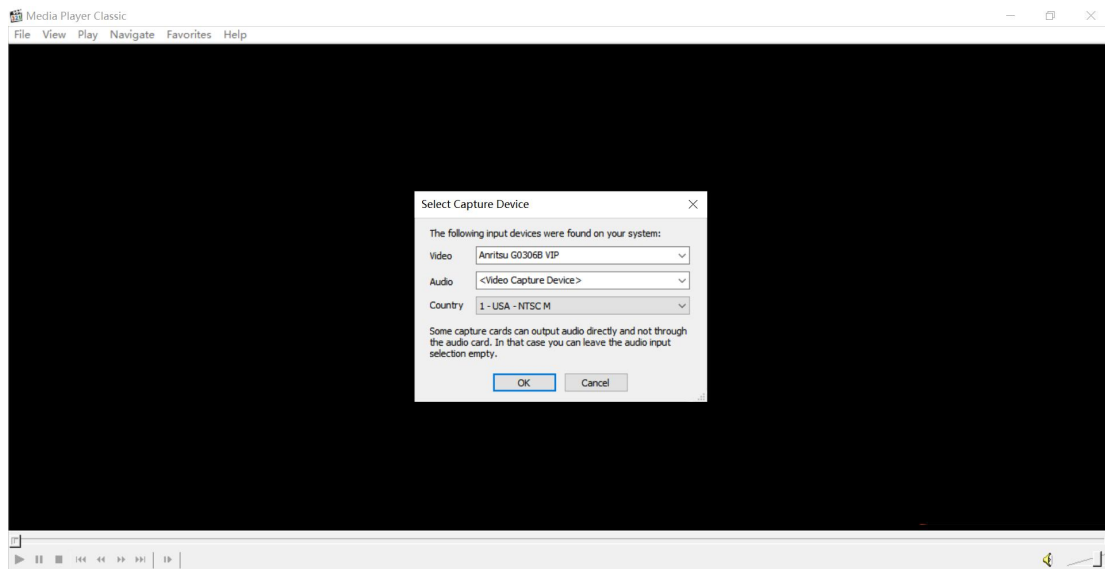


4. Insert fiber optic connector into the suitable tip of the probe, you can see fiber endface on the PC display. If you want to save images, click “File” and then “Save Image”.

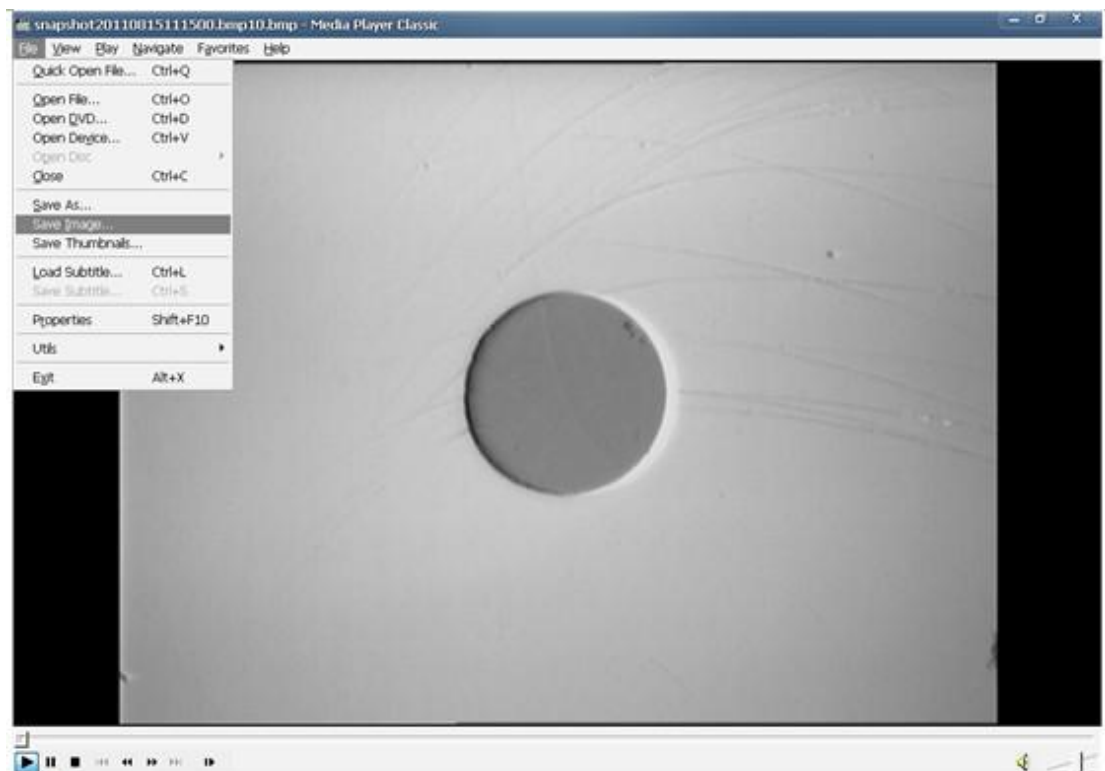

4. If you want to save videos, click “View” and then “Capture (Ctrl+8)”, save videos as AVI format for future analysis.

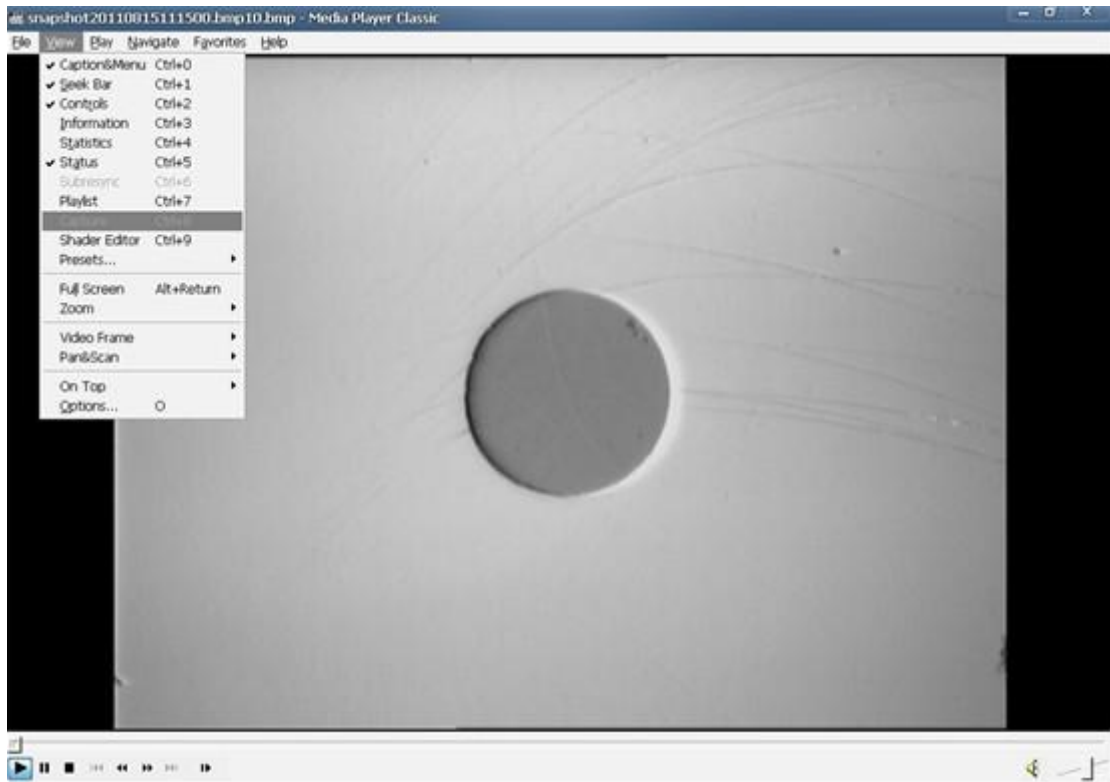

The interface for Capture Settings is as follows:

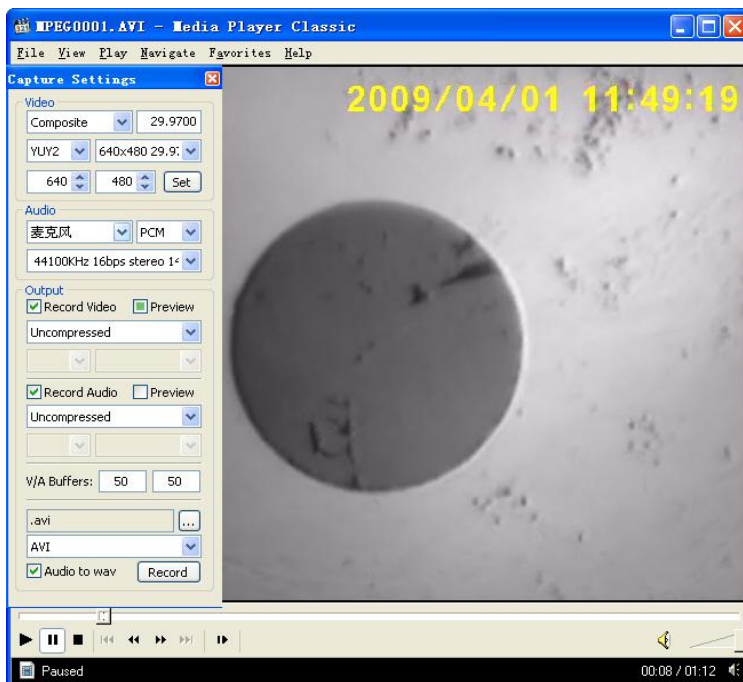


Note:

Because the configurations and systems of computers are different, some computers might not open MAY91 Fiber Microscope Probe or capture and save pictures. In this case, the following settings about




“Output” should be done.

1. Click “View”, and then “Options”

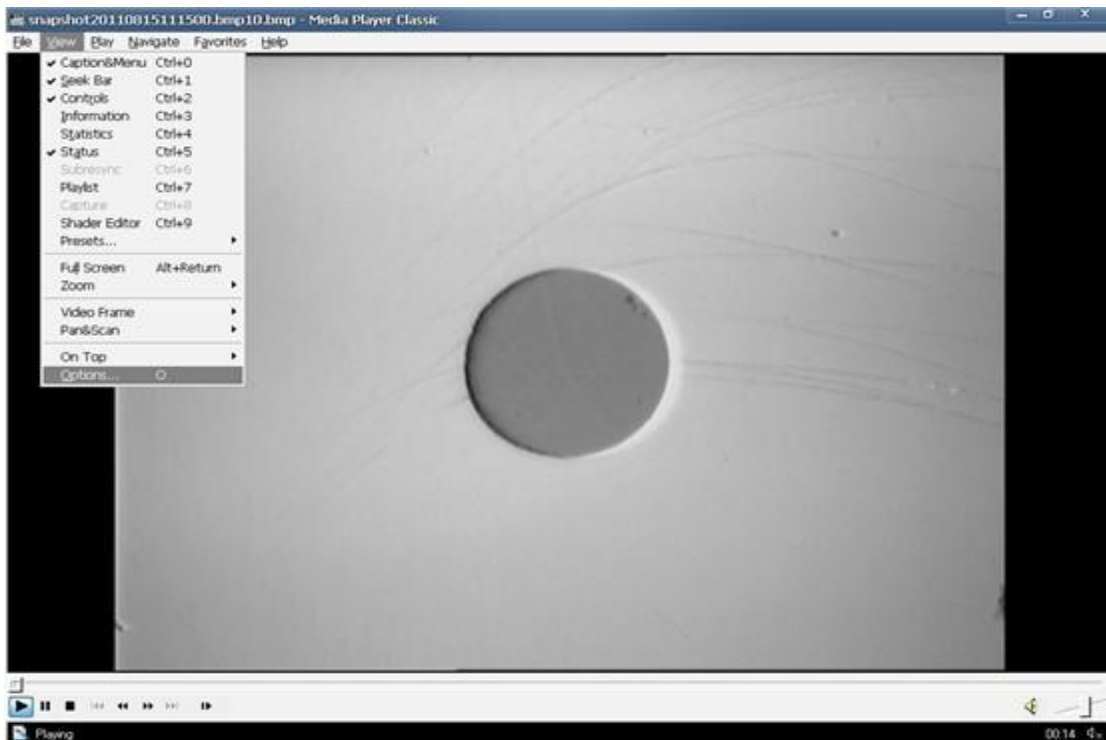

2. Click “Output”.

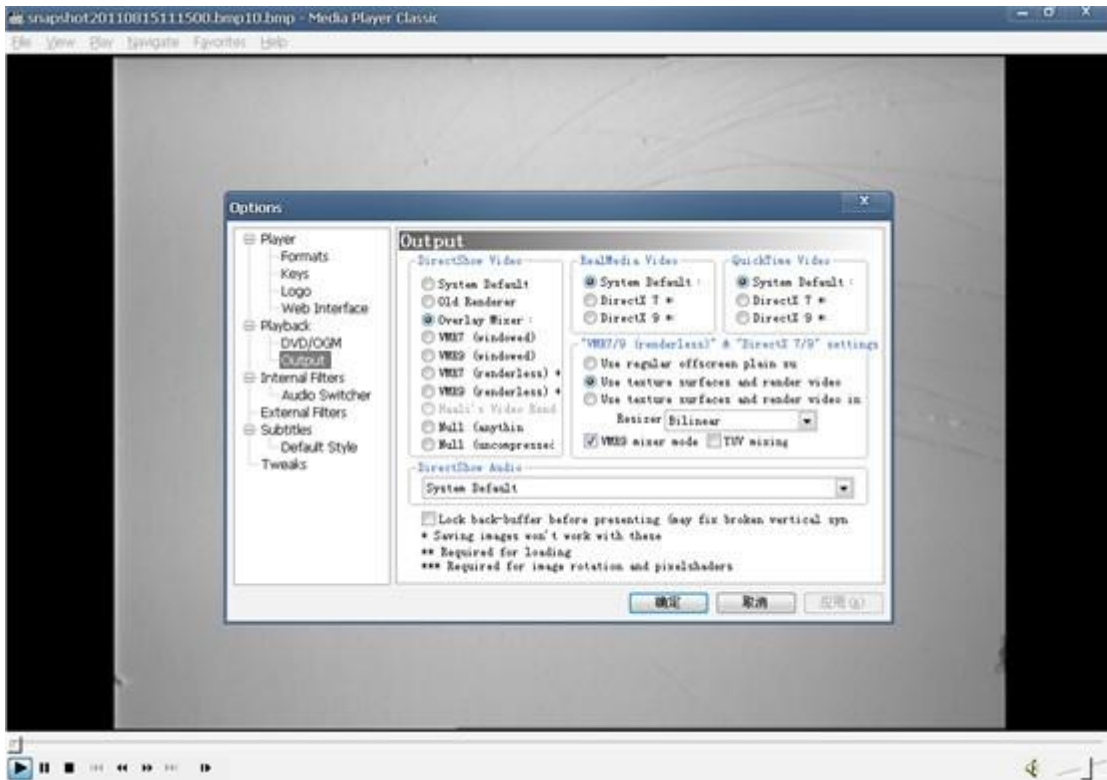

3. In “Directshow Video”, click “Overlay Mixer” (or “VMR7--Renderless”). Then click “确定” . Restart the software.

